

## 25 Table of Figures

Figure 1 The location of thermistors within the SFM1 needle set .....	19
Figure 2 Heat Ratio Method principle.....	24
Figure 3: Modelled changes in $v_1/v_2$ ratios with time for a small wound width (0.17 cm) and low sap velocity (5 cm h <sup>-1</sup> ) compared with a large wound width (0.30 cm) and high sap velocity (45 cm h <sup>-1</sup> ). Note that, with both mild and extreme departures from the ideal caused by sensor implantation, $v_1/v_2$ is essentially linear between 60 and 100 s as indicated by the $r^2$ values for the linear regressions fit over the data for this period. ....	26
Figure 4: (A) Example of an episode of reverse flow (hourly means) in a lateral root of <i>Eucalyptus camaldulensis</i> Dehnh, erroneously measured by probes with a large spacing error (~0.2 cm). Data on Days 92 and 93 were collected after the root was severed to stop flow and indicate the potential for ambient temperature fluctuations to disturb measurements in un-insulated sensors. The straight line shows the mean erroneous velocity arising from a probe spacing error. (B) Example of corrected data (corresponding to Day 7 in Figure 2A) derived with the protocols described in the text. The middle series is the intermediate solution, which assumes both downstream and upstream probes contributed to the spacing error, whereas the other two series assume that only probe $x_1$ or $x_2$ was incorrectly spaced. ....	28
Figure 5 Using the unique ICT Power-Bus, and Power-Bus Plugs to trickle charge the internal SM1 battery. ....	34
Figure 6 Solar panel connected directly to an SFM1 Sap Flow Meter.....	36
Figure 7 External 12V battery connected directly to an SFM1 Sap Flow Meter.....	37
Figure 8 Solar panel connected to an external 12V battery with a solar regulator to charge a..	38
Figure 9 Using the ICT Power-Bus to daisy chain multiple instruments together to share a common external power supply. ....	39
Figure 10 Solar panel connected to an external 12V battery with a solar regulator to charge multiple SFM1 Sap Flow Meter's daisy chained together .....	40
Figure 11 Recommended Solar Panel Specifications .....	41
Figure 12 ICT Sap Flow Power Calculator for calculating SFM1 power consumption and auxiliary solar power requirements.....	42
Figure 13 SFM Menu Bar provides software access to Power Down the SFM .....	51
Figure 14 User Advice Message to alert the user that the SFM1 cannot power down as external power is still connected. ....	51
Figure 15 SFM1 Software Splash Screen.....	52
Figure 16. Device Selection Window.....	53
Figure 17 Device Selection Window searching for the connected device.....	53
Figure 18 Device Selection Window reporting the device that was found connected .....	54
Figure 19 SFM1 Splash Screen while connecting to the instrument.....	54
Figure 20 The SFM1 Graphical User Interface connected to an instrument .....	55
Figure 21 File & Commands Drop-Down Menu's.....	56
Figure 22 User Advice Message when attempting to connect to an SFM1 whilst connected to the SFM1 .....	56
Figure 23 the SFM Software Menu Bar.....	56
Figure 24 the SFM Software Commands dropdown menu for disconnection from the SFM1 .....	56
Figure 25 User Advice Message when disconnecting from the SFM1 when in Manual Mode .....	57
Figure 26 Device Selection Window – Connection Type RF .....	58
Figure 27 Device Selection Window .....	58
Figure 28 RF Device Chooser Window.....	59
Figure 29 RF Device Chooser Window – attempting to wake up devices within range.....	59

Figure 30 RF Device Chooser Window – Discovering devices within range .....	60
Figure 31 RF Device Chooser Window – Search for more Devices? .....	60
Figure 32 RF Device Chooser Window – displaying the devices within range that have been discovered.....	61
Figure 33 RF Device Chooser Window – Save Groups Option.....	61
Figure 34 Device Discovery Merge or Clear Discovery Search Option Window.....	62
Figure 35 Establishing RF Link wirelessly via the MCC1 Radio Frequency modem.....	62
Figure 36 Connecting to an SFM1 Wirelessly via the MCC1 Radio Frequency modem.....	63
Figure 37 The main SFM software Window for configuring and operating the SFM1 Sap Flow Meter .....	66
Figure 38 Instrument Information panel of the SFM Software.....	67
Figure 39 SD Card Status & Download Icon.....	68
Figure 40 SD Card Status & Download Icon.....	68
Figure 41 Microsoft Windows Right Click Menu for Formatting a Drive .....	69
Figure 42 Serial Number Field.....	70
Figure 43 Individual Serial Number Toggle Icon .....	70
Figure 44 Application Board Serial Number Field .....	70
Figure 45 Generic Communication Board Serial Number Field.....	70
Figure 46 Overall Instrument Serial Number Toggle Icon.....	71
Figure 47 Application Board Firmware Number Field.....	71
Figure 48 Generic Communications Board Firmware Number Field.....	71
Figure 49 External Power Supply Status Fields .....	71
Figure 50 External Power Supply Status Icons .....	72
Figure 51 Internal Battery Voltage Field .....	72
Figure 52 Internal Battery Voltage Status Fields .....	72
Figure 53 Dialogue Box location.....	73
Figure 54 SFM1 Dialogue Box – Example of user feedback messages.....	73
Figure 55 Dialogue Box Clear icon.....	74
Figure 56 SFM1 Software Status bar .....	74
Figure 57 SFM1 “About” Splash Screen.....	75
Figure 58 Dynamic message advising the user of software & Firmware updates available from the web site .....	75
Figure 59 Display Debug Registers is output to the Dialogue Box in the SFM software.....	76
Figure 60 The Measurement Mode is a drop down menu that has a selection of preformatted logging intervals.....	77
Figure 61 The Reporting Option is a drop down menu that offers the choice between Needle Temperature Mode and Sap Flow Mode. ....	79
Figure 62 Access to the Delayed Start/Suspend Configuration option is via the clock icon .....	80
Figure 63 Setting the Delayed Start or Measurement Suspend options.....	80
Figure 64 SD Card Icons change from Active to inactive during a measurement .....	82
Figure 65 Set Date & Time via the Commands>Update Date/Time menu.....	83
Figure 66 Configure the parameters to be logged to the data file on the SD Card .....	84
Figure 67 Default settings for SD Logging options of the SFM1 .....	84
Figure 68 Raw Temperature Mode Settings .....	86
Figure 69 Raw Needle Temperatures are not displayed in the Dialogue Box instead stored direct to SD card. ....	86
Figure 70 Dynamic display of Total Measurement Time .....	87
Figure 71 Diurnal stem temperature variation underlying individual Heat Pulse measurements ..	88

Figure 72 Raw Temperature Data of an individual Heat Pulse Curve graphed using Sap Flow Tool software.....	88
Figure 73 SFM1 Initialisation protocol for a Heat Ratio Method measurement.....	89
Figure 74 SFM1 performing a heat Pulse and waiting 60 seconds for the maximum temperature rise to be measured and verified.....	89
Figure 75 Ratios are automatically calculated before the measurement is completed.....	90
Figure 76 automatically processed Sap Flow results are processed on-board the SFM1 and displayed in the dialogue box.....	90
Figure 77 the Energy Pulse Setting can be changed from the default 20 Joules using the drop down menu and clicking the Update Pulse Energy icon.....	91
Figure 78 Default Correction parameters for the SFM1 Sap Flow Meter.....	92
Figure 79 Positive zero offset with inner measurement point located in heartwood.....	94
Figure 80 Negative zero offset with inner measurement point located in heartwood.....	94
Figure 81 Archimedes principle measuring volume by the weight of the displacement of water.....	98
Figure 82 Accounting for radial sap flow gradients when calculating volumetric sap flow.....	102
Figure 83 The Reports tab is a summary of all measured and calculated parameters logged by the SFM1.....	103
Figure 84 the 4 steps to assemble the coring tool.....	108
Figure 85 a summary of the parameters recorded and stored for each measurement when the SFM1 is configured in Sap Flow Mode as displayed in Sap Flow Tool Software (left) and Excel (right).....	125
Figure 86 The SD Card Logging Options tab showing that the calculated parameters of Raw Heat Pulse Velocity, Sap Velocity and Sap Flow will be logged to the *.CSV data file along with the Diagnostic Temperature data Max Temperature, Average Temperature Rise, Ratios and Power management data; internal battery and External Supply.....	126
Figure 87 Download Data Icon.....	127
Figure 88 Microsoft Windows "Save As" Window.....	127
Figure 89 Data management Pop-up Option to Delete or Rename the data file.....	128
Figure 90 Clicking on the Rename option provides the facility to rename the file name and or the file extension.....	128
Figure 91 Resume File Dialog offers the option to "Append" data to an existing file or "Overwrite" the data of an existing file.....	128
Figure 92 A newly written data file will not appear in the SD Card tab until the Refresh Icon is clicked.....	129
Figure 93 the alternate displays of the SD Card tab when using the "Show List"/"Hide List" toggle icon.....	130
Figure 94 the error message displayed in the dialogue box when an incorrect download procedure is attempted (left) and a successful download when the correct procedure is followed (right).....	130
Figure 95 the "Stop" Download icon is inactive by default only becoming active during a download.....	131
Figure 96 Clicking on the Rename option provides the facility to rename the file name and or the file extension.....	131
Figure 97 clicking "OK" on the File Erase Pop-up dialog results in the immediate deletion of the data file on the SD Card tab.....	132
Figure 98 MicroSD Card Adaptor with MicroSD card from the SFM1 inserted into the USB port of a computer.....	133
Figure 99 inactive PC Logging Tab.....	134
Figure 100 example sap flow data logged direct to a PC_Sapflow.csv file on the computer....	134

Figure 101 the Menu sequence required to start Logging Incoming Sap Flow data direct to the computer .....	135
Figure 102 a summary of the sap flow mode reporting option data that has been logged direct to a computer .....	135
Figure 103 the expanded File Menu option sequence to stop logging sap flow data to the computer .....	136
Figure 104 example Raw Temperatures data logged direct to a PC_Tempertaures.csv file on the computer .....	136
Figure 105 Start Log Temperatures function to record raw temperatures to a file on the computer .....	137
Figure 106 Log Tempertaures summary info on the SD Card tab .....	137
Figure 107 Stop Log Temperatures function to end recording raw temperatures to a file on the computer .....	137
Figure 108 Raw Heat Pulse Velocity data is relative in nature and can be used qualitatively but not quantitatively.....	138
Figure 109 the combined analysis of sap velocity simultaneously overlaid with radial profile of sap velocity .....	139
Figure 110 Sap Flow Rate and Sap Volume displayed on the same graph using dual Y axis.....	140
Figure 111 Cumulated sap flow volume provides teh plant daily water use as it is an automated integration of the area under the Sap Flow rate curve. ....	140
Figure 112 Using SFT1 Sap Flow Tool Software to analyse sap flow data with meteorological data to analyse the intimacy of the Soil Plant Atmosphere Continuum .....	141
Figure 113 10 days of stable sap flow data for <i>Callitris glaucophylla</i> prior to severing the stem	143
Figure 114 The immediate cessation of sap flow for <i>Callitris glaucophylla</i> upon cavitation caused by severing the water column of the tree .....	144
Figure 115 steady absolute Zero Flow state reached after complete severing of xylem of <i>Callitris glaucophylla</i> .....	144
Figure 116 10 days of stable sap flow data for <i>Eucalyptus blakelyi</i> prior to severing the stem ...	147
Figure 117 the immediate cessation of sap flow for <i>Eucalyptus blakelyi</i> upon cavitation caused by severing the water column of the tree.....	147
Figure 118 absolute Zero Flow state reached after complete severing of xylem of <i>Eucalyptus blakelyi</i> . Note the negative spike immedaitely after severing as the values come to equilibrium follwoing the next measurement. ....	148
Figure 119 shows a typical diurnal heat pulse velocity pattern of a <i>Eucalyptus camaldulensis</i> with very 'clean' HRM data with no obvious problems, with needles well in conducting sapwood over a period of 1 week. Zero flows are experienced at night time with fluctuating peaks throughout the day in response to changing light conditions and evaporative demand. In this example the effect of a rainfall event on sap flow can be clearly seen.....	150
Figure 120 Data from probes installed in wood with poor hydraulic conductance: This is typically what you might see if these TC junctions were located in non-conducting heartwood or cambium/bark tissue. There is only a very slight diurnal pattern of heat pulse velocity (HPV). Note also that minimum HPV is very well aligned with the zero line, indicating that probe alignment in this example was quite good, assuming there was next to zero sap flow at this measurement point. ....	150
Figure 121 Data from a sensor that had developed a significant wound around the drill holes, followed by data obtained from the same probe set after it was re-installed nearby on the same stem: Note how wounding has severely reduced the magnitude of HPV measurements and dampened the diurnal pattern compared to the 'true' measurements from the fresh installation.....	151

Figure 122 Data from a sensor that has been poorly installed such that one or more probes is badly out of alignment, resulting in an elevated (or decreased) baseline during periods of zero or near zero sap flow: The HRM has a provision to correct for bad probe spacing, but only to a certain extent (see Burgess et al. 2001). Nominally, probe spacing errors leading to baselines > +5 or < -5 cm hr<sup>-1</sup> cannot be corrected and reinstallation is necessary (such as in the case above). ..... 151

Figure 123 Example of HRM30 probes installed upside down. The diurnal pattern is correct except the values are negative. The upside down pattern is observed when the downstream temperature probe (black wire) is installed in the upstream position in the plant and vice versa. These problems are easily fixed, and furthermore, the data collected is not erroneous other than being inverted (also easy to fix as long as the user knows which way is up, particularly when working with roots!) ..... 152

Figure 124 Example of a Radial Sap Velocity profile and how the positions of the SFM1 Needle characterise the radial gradient. .... 153

Figure 125. Generalised structure of a tree stem showing orientation of major tissues: outer bark, inner bark (i.e. phloem), cambium, sapwood (i.e. xylem) and heartwood (Kramer & Kozlowski, 1979). ..... 165

Figure 126 Show Thermistor Calibration function in the SFM tab ..... 166

Figure 127 Hide Thermistor Calibration function in the SFM tab ..... 167

Figure 128 Accessing the Web Update options from the SFM1 Software ..... 168

Figure 129 The Default Web Update Options settings..... 169

Figure 130 Manual check for Web updates when the SFM1 is not connected to the software. 169

Figure 131 SFM Software feedback when performing a web update when the SFM1 is not connected to the software ..... 170

Figure 132 SFM Software feedback upon performing a web update when the SFM1 is connected to the software ..... 170

Figure 133 Low rate of trickle charging internal battery..... 173

Figure 134 SFM1 Logging Options used in battery test..... 173

Figure 135 SFM1 Internal battery voltage overlaid against external 7 Ah battery voltage..... 175

Figure 136 Selecting the Com Port in the MCC Device Configuration software ..... 177

Figure 137 Select Signal Strength Test from the Mode of Operation dropdown menu ..... 177

Figure 138 Confirm open search or specific search by choosing Any Device or Paired Device. An open search for any device is good when doing verification testing of signal strength for all instruments deployed in a field experiment..... 178

Figure 139 Enter the Instrument address into the Paired Device field and click verify address to lock it to a single instrument. This is ideal for conducting a signal strength survey prior to deployment..... 178

Figure 140 Click Apply Settings the changes are saved to Non-Volatile RAM. Then click Exit Configuration Mode and the screen is greyed out and the Red LED's on the MCC1 cease flashing. The MCC1 has now been configured for Signal Strength testing..... 178

Figure 141 HyperTerminal MCC RSSI Test Utility Properties dialogue boxes..... 179

Figure 142 MCC RSSI Test Utility Menu ..... 179

Figure 143 Manually setting the serial number of an instrument to RAM in the MCC1 ..... 180

Figure 144 after selecting a test either Continuous or Burst Test the MCC establishes the connection to the instrument with the message "Please wait.," then the signal strength variables are displayed on screen. .... 180

Figure 145 RSSI values < 20 show extremely strong signal strength..... 181

Figure 146 RSSI values of >80 show very poor signal strength ..... 181