

# Dendrometer

## Radius Dendrometer (Type DR2)

For measuring changes in stem radius  
of fast growing plants.



## User Manual

## 1. Introduction

Thank you for purchasing an Ecomatik Dendrometer type DR2. This is a highly precise sensor for continuous measurements of radius changes of trees under both indoor and outdoor conditions.

This manual is written to help you install and operate your DR2 dendrometer with least difficulty and for desirable results. Please read it carefully before installing the sensor, and refer to it if you should have any difficulty with the sensor in the future.

The dendrometer is the sensor part of a measuring system. This means that the dendrometer should be connected to a data logger for continuous data recording. The dendrometer is compatible with the most data logger types. At Ecomatik a low-cost, special for dendrometers developed DL18 logger is available.

## 2. Product Description

As shown below, the radius dendrometer consists of:


1 Sensor with 5 m cable. The cable length is extendable to 100 m

1 Aluminum frame

2 Special screws for fixing the frame onto the plant stem

Please contact us should you miss anything of these items:

- Sensor body with mounting frame
- 2x special screws incl. nuts and washers

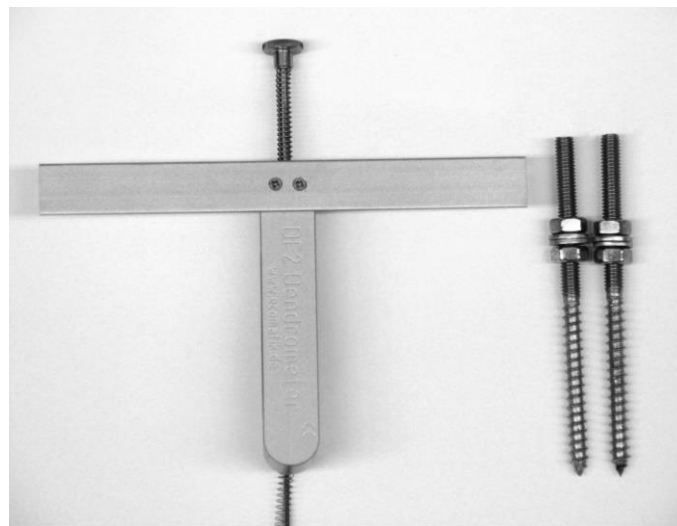

**Radius Dendrometer DR2**

The standard cable length is 5 m. if you ordered cable extension, the cable length is the ordered extension + 5 m.

To meet the requirements of different loggers, there are 2 different types of cables: **cable with plug** and **cable without plug**. Cable with plug can only be connected to Dendrometer Logger DL18. Cable without plug can be connected to other loggers.

### 3. Safety Information

The sensor is protected from rain water, but it is not waterproof. Please do not immerse the sensor in water.

Avoid any tension between the cable and sensor during handling and operation.

Pay attention to connections to data logger. Wrong connections will provide wrong readings.

### 4. Installation

#### 4.1 Cable Extension

The standard version is delivered with 5 m cable. It can be extended up to 100 m. Cable type 4x0.25 mm<sup>2</sup> with shield is recommended for extensions.

#### 4.2 Required tools for installation

A hand-held drill with 4 mm drill bit, tree resin, cable straps, 2 spanners for M6 screw nut (10 mm).

#### 4.3 Mounting

Remove the dead bark from the region/section on which the sensor is to be installed. Ensure no injury/damage to the living tissues below the dead bark.

Drill two holes ( $\phi=4$  mm, max. 6 cm deep) on the left and right side and max. 5.5 cm apart from the measuring point. Dip the screw top into the tree resin before screwing them into the trunk. Both screws are screwed 6 cm into the holes by using the counteracted two nuts. Fix the frame, with sensor attached, to the screws.

Turn the screws so that the sensor rod is pushed in by about 2-3 mm. When the installation is taking place shortly before frost period, the sensor rod should be pushed in by 5 mm. At frosts the stem diameter can shrink considerably.

Fix the cable onto the tree stem/branch so that the sensor is protected from any accidental pull/ drag of the entire cable length. This can be done using a rope or cable straps. In addition, there should be no tension between the sensor and cable.

Ensure that no rain water can run along the cable into the sensor casing.

### 5. Wiring and Logger Configuration

The dendrometer is compatible with most data loggers. In the following we describe the connection with Dendrometer Logger (DL18), Campbell Logger (CR1000). Please contact us if your logger is not described here.

#### Dendrometer Data Logger (DL18)

The DL18 is a battery powered, waterproof logger for connecting 4 dendrometers. It is a very effective data logger for dendrometer measurement under outdoor conditions. For details please see the user manual of the DL18.

### Campbell Data Logger (CR1000)

The dendrometer can be measured both in single-ended voltage as well as differential voltage mode. Differential voltage mode provides better accuracy. But single-ended mode requires half as many channels as differential mode. One CR1000 can include 16 dendrometers in single-ended mode, but only 8 dendrometers in differential mode.

#### Single-ended Voltage Mode ( 2 dendrometers)

Connection		
	Cable Color	Input Port
1 <sup>st</sup> dendrometer	Yellow	1H
	Green	Ground
	Brown	Vx1
	White	Ground
2 <sup>nd</sup> dendrometer	Yellow	1L
	Green	Ground
	Brown	Vx1
	White	Ground
<b>Program Syntax</b> <i>ExciteV (Vx1,2500,0)</i> <i>VoltSe(SEVolt(),2,mV2500,1,True,0,_50Hz,Mult(),Offs())</i> If Multiplier=10.16, Offset=0, the results are measured in microns.		

#### Differential Voltage Mode ( 2 dendrometers)

Connection		
	Cable Color	Input Port
1 <sup>st</sup> dendrometer	Yellow	1H
	Green	1L
	Brown	Vx1
	White	Ground
2 <sup>nd</sup> dendrometer	Yellow	2H
	Green	2L
	Brown	Vx1
	White	Ground
<b>Program Syntax</b> <i>ExciteV (Vx1,2500,0)</i> <i>VoltDiff(DiffVolt(),2,mV2500,1,True,0,_50Hz,Mult(),Offs())</i> If Multiplier=10.16, Offset=0, the results are measured in microns.		

An interval 0.5-hour for data collection can reveal the diurnal course of diameter changes very well.

## 6. Adjustment and maintenance

Ensure that no falling branches, fruits or snow land on the sensor. The sensor is protected against water droplets but is not waterproof.

When the sensor is correctly installed, it will function under outdoor conditions without the need for further maintenance.

Depending on the growth rate of the tree, the sensor should be reset after some months or years of measurements. When the output approaches 25 mm, the sensor needs to be reset.

Relax the screw slowly so that the sensor rod is pushed in by about 2-3 mm. When the reset is taking place shortly before frost period, the sensor rod should be pushed in by 5 mm. At frosts the stem diameter can shrink considerably.

## 7. Technical Specification

<b>Name of the Sensor</b>	Radius dendrometer Type DR2
<b>Use area</b>	For measuring radius growth of fast growing trees
<b>Suitable for plant size</b>	Diameter > 8 cm
<b>Limitation</b>	Tree trunk is injured by drilling (the damage can be minimized if using tree resin).
<b>Range of the sensor</b>	25.4 mm
<b>Resolution</b>	The resolution of the sensor itself is infinite. The resolution of readings is determined by connected data logger, e.g. CR1000: 3.3 $\mu\text{m}$ Dendrometer logger DL18: 0.5 $\mu\text{m}$
<b>Accuracy</b>	Dendrometer dependent: Max. $\pm 1.97\%$ of reading (stable offset)  Dependent on the connected data logger, e.g.: CR1000: $\pm(0.04\%$ of reading + $10\mu\text{m})$ Dendrometer logger DL18: $\pm 0.1\%$
<b>Temperature coefficient of the sensor</b>	$< 0.2 \mu\text{m} / ^\circ\text{C}$ in the whole range
<b>Linearity</b>	$< 0.7\%$
<b>Environment</b>	Outdoor condition: $-25$ to $70^\circ\text{C}$ air temperature, 0 to 100% relative air humidity
<b>Weight of the sensor</b>	33 g without cable
<b>Power supply</b>	Stabilized Vex 0.5 – 10 VDC, power consumption practically zero
<b>Material</b>	Stainless steel and Aluminium
<b>Cable length</b>	5 m, extendable up to 100 m